

Tailscale set-up

Tailscale on SMHUB (Quick Setup Guide)

Applies to all SMHUB models: Professional, Essential, Nano Mg24

Tested with:

- SMHUB-OS **v0.3.10**
 - smhub-services **v0.2.7**
 - smhub-web **v0.2.23**
 - Tailscale app **v1.78.1-2**
-

1. Install Tailscale

- Open **Apps**
 - Install the **Tailscale** app
-

2. Start Tailscale (Optional: Enable Autostart)

- Go to **Apps** → **Tailscale**
 - Click **Run**
 - *(Optional)* Enable **Start on boot** if you want Tailscale to start automatically after reboot
-

3. Authenticate Device

In **Console**, run: `sudo /opt/bin/tailscale up`

The system will print a login URL (for example): `https://login.tailscale.com/a/xxxxxx`

Open the link in your browser and authorize the device.

4. Connect Another Device

- Install Tailscale on your PC
- Log in with the **same account**
- Authorize the device

Once both devices are in the same tailnet, they can communicate securely.

Notes

- Authentication is **interactive** (browser required)
 - After authorization, the terminal is no longer needed
 - Tailscale reconnects automatically on reboot
 - No port forwarding or firewall changes required
-

Revision #3

Created 18 January 2026 23:23:37 by Support3

Updated 18 January 2026 23:30:46 by Support3