


? Manual for Testers: Z-Wave Integration Installation (Home Assistant)


1. Open Integrations Menu

Go to **Settings** → **Devices & Services**, then click **Add Integration** at the bottom right.

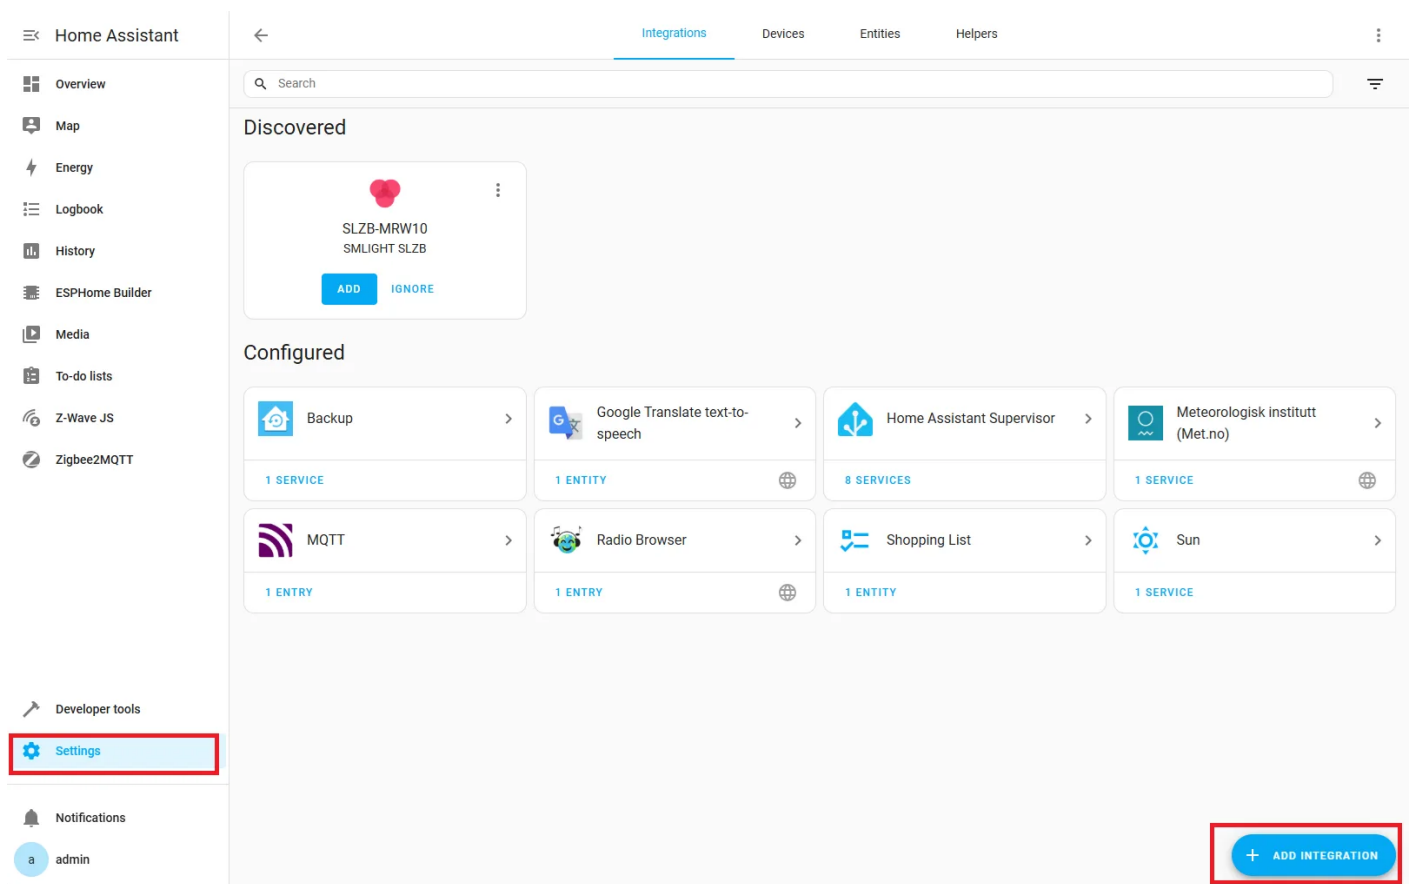


2. Search for Z-Wave Integration

Type **Z-Wave** into the search bar and click on the integration when it appears.

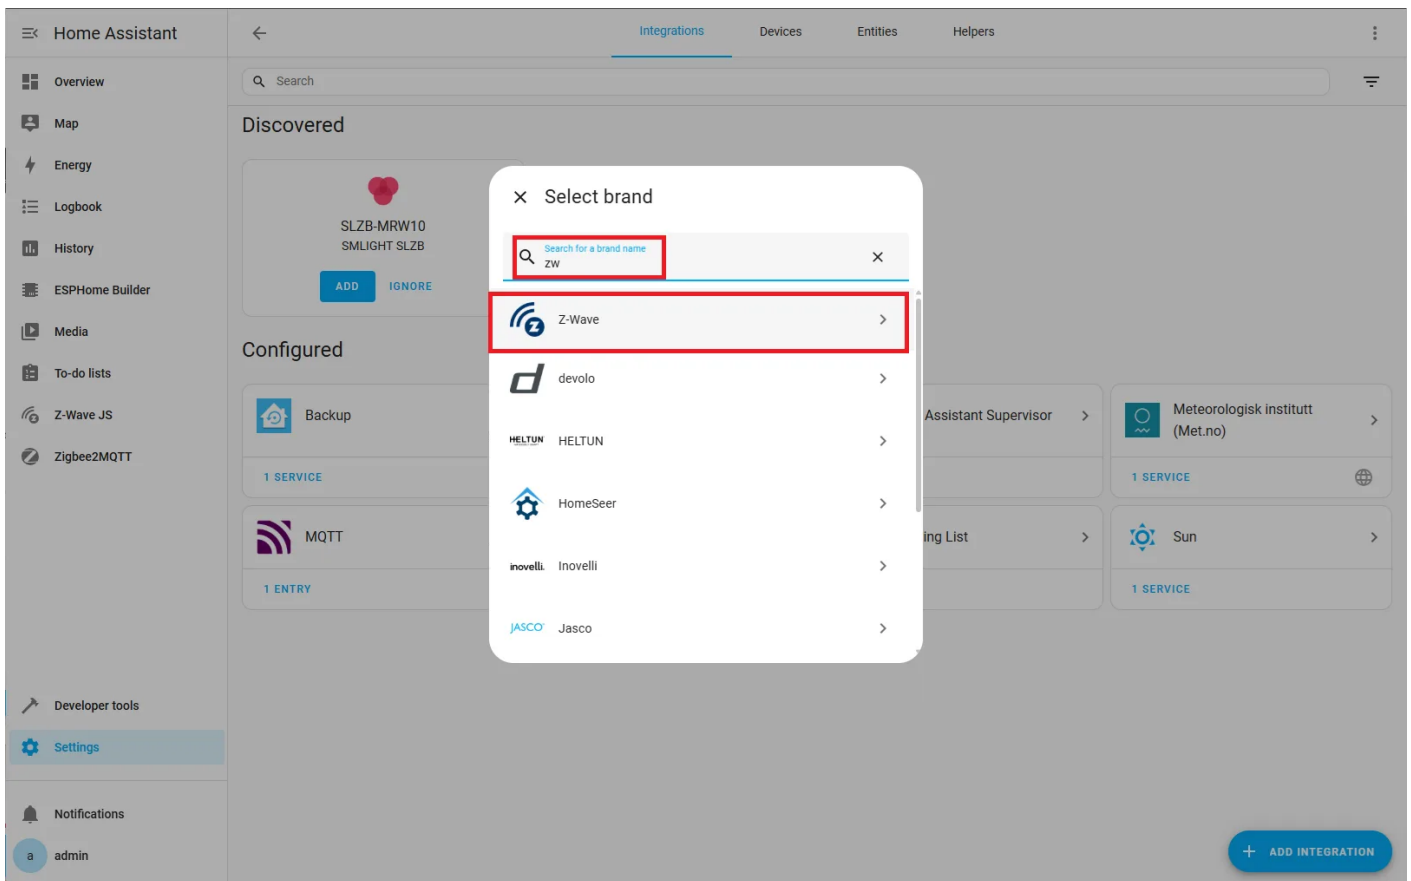


3. Select Custom Installation

Choose the **Custom Installation** option.

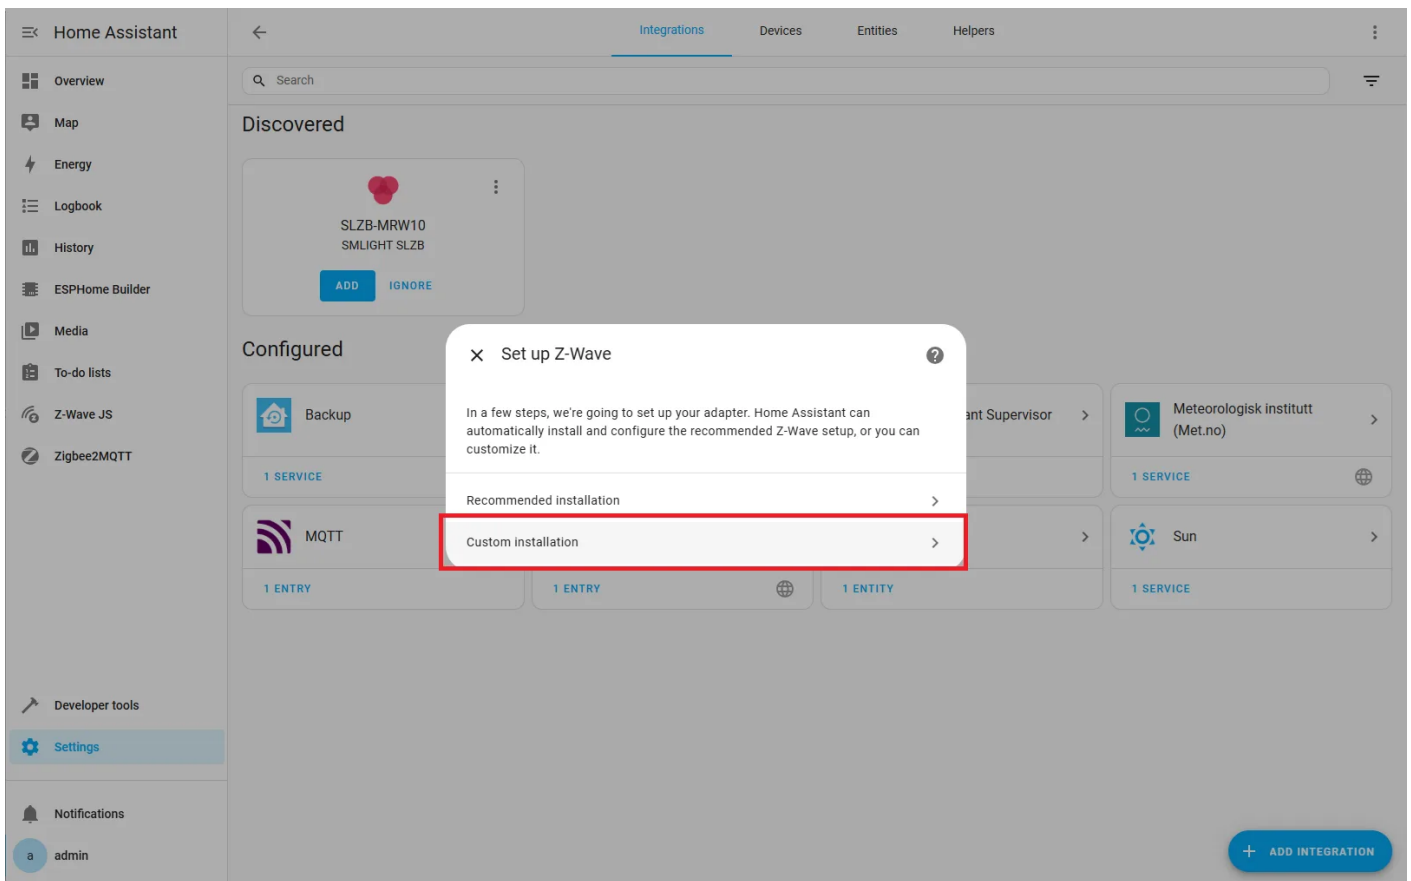


4. Disable Supervisor Add-on

Uncheck **Use the Z-Wave Supervisor Add-on** and click **Submit**.

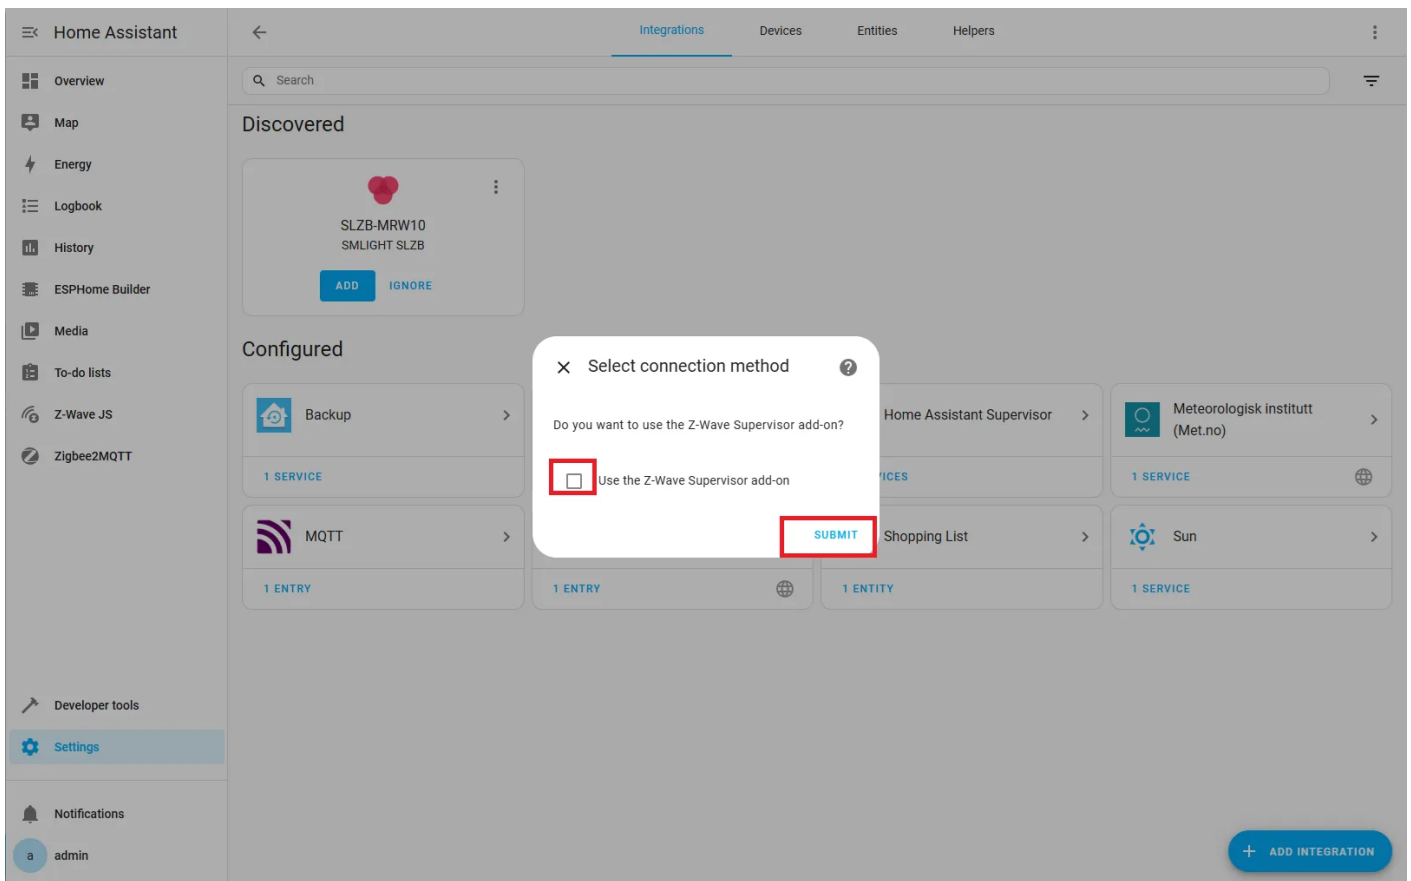

5. Get the Add-on Hostname

In a new window, go to **Settings** → **Add-ons** → **Z-Wave JS UI**, and **copy the hostname** of the add-on.

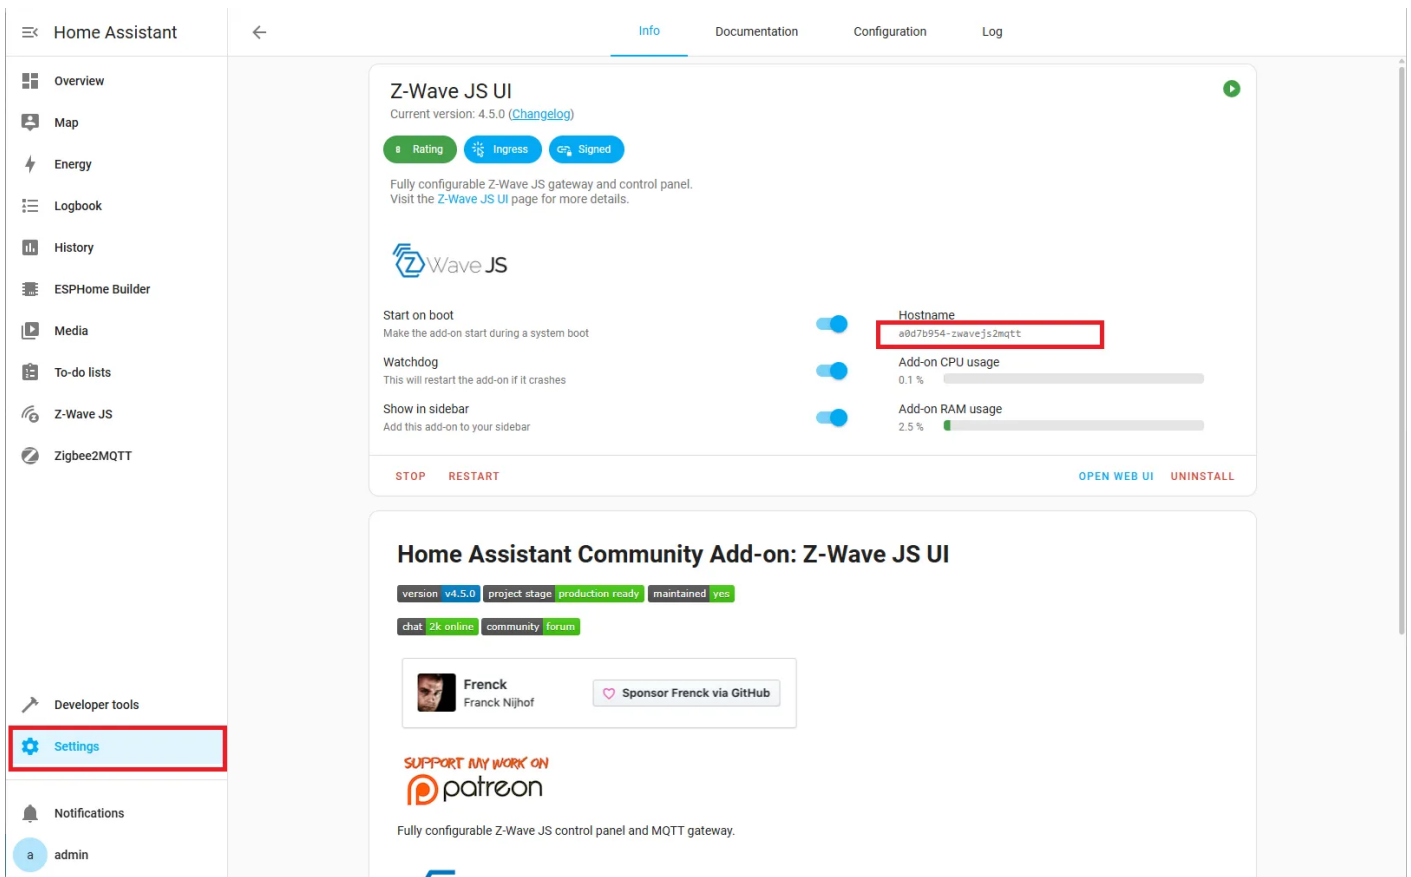


6. Enter WebSocket URL

Return to the Z-Wave integration setup screen and enter the WebSocket URL in the format:


ws://HOSTNAME:3000

Replace `HOSTNAME` with the copied hostname.

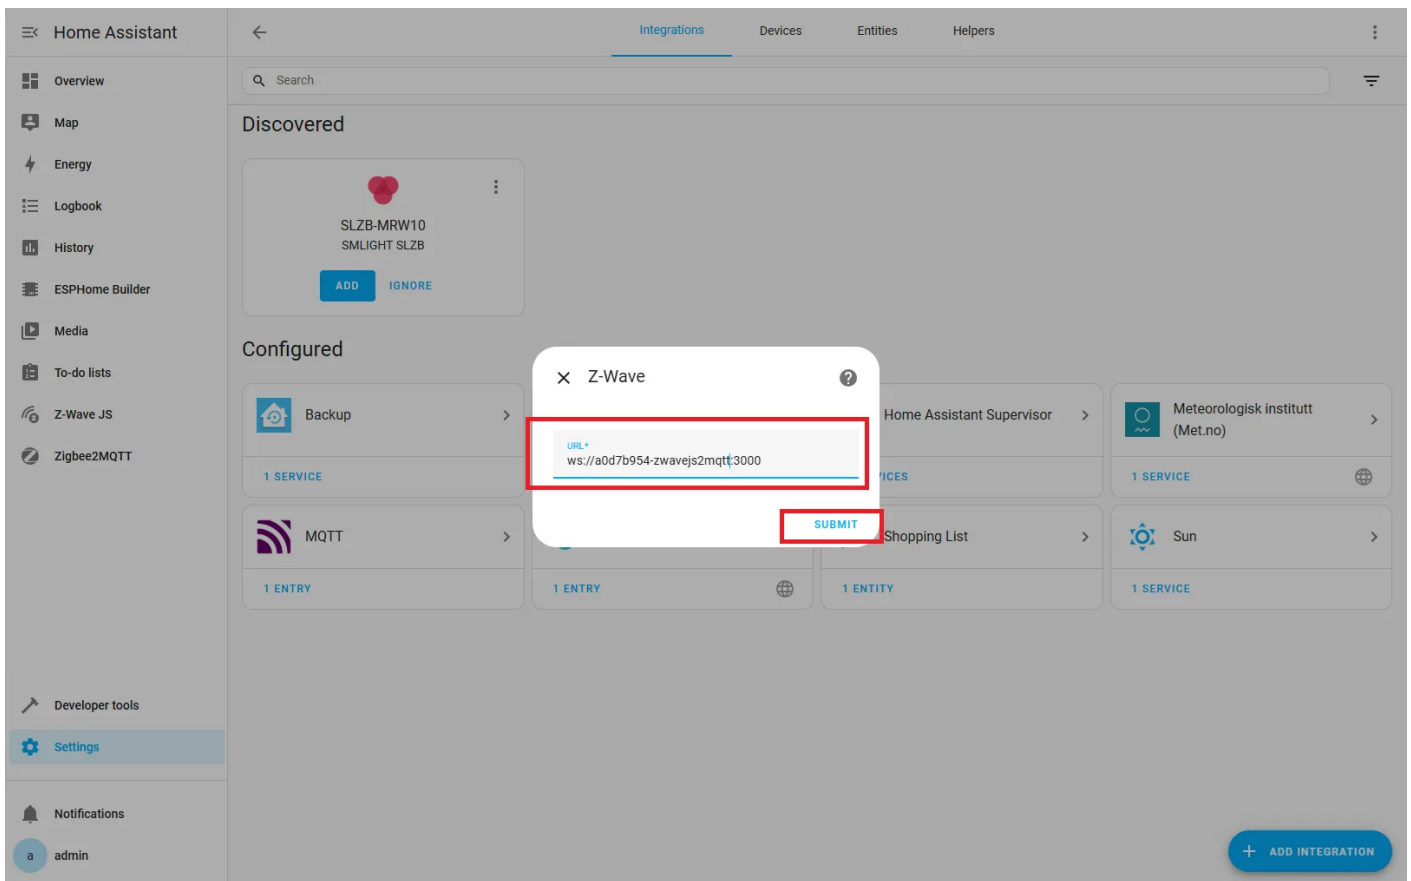

7. Finalize Integration

Optionally set a device name (e.g., **SLZB-MRW10**) and select a location. Click **Finish**.

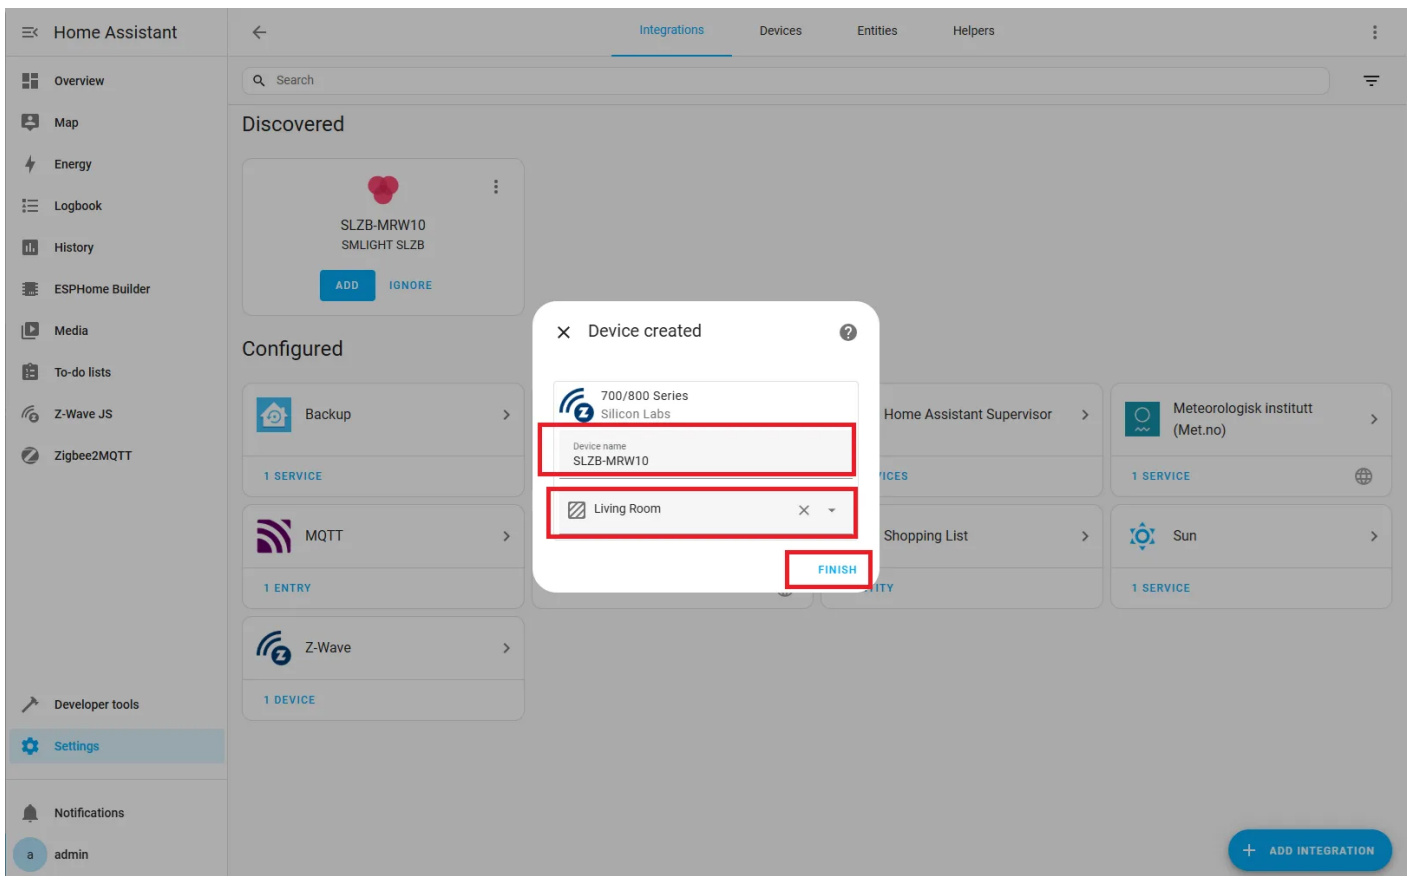

Revision #2

Created 27 July 2026 15:04:27 by Taras

Updated 27 July 2026 15:07:45 by Taras